

1 Función dos 36 pines do porto Centronics

A función de cada un dos 36 pines do porto Centronics é a seguinte:

| Pin | Señal |
|-----|-----------------------------|
| 1 | Strobe |
| 2 | Data0 |
| 3 | Data1 |
| 4 | Data2 |
| 5 | Data3 |
| 6 | Data4 |
| 7 | Data5 |
| 8 | Data6 |
| 9 | Data7 |
| 10 | Ack |
| 11 | Busy |
| 12 | Paper Empty |
| 13 | Select |
| 14 | Auto Feed |
| 15 | {OSCXT} (Error) |
| 16 | GND (Signal Ground) |
| 17 | GND (Chassis Signal Ground) |
| 18 | 5V |
| 19 | GND (Signal Ground) |
| 20 | GND (Signal Ground) |
| 21 | GND (Signal Ground) |
| 22 | GND (Signal Ground) |
| 23 | GND (Signal Ground) |
| 24 | GND (Signal Ground) |
| 25 | GND (Signal Ground) |
| 26 | GND (Signal Ground) |
| 27 | GND (Signal Ground) |
| 28 | GND (Signal Ground) |
| 29 | GND (Signal Ground) |
| 30 | GND (Signal Ground) |

| Pin | Señal |
|------------|---------------------|
| 31 | Prime |
| 32 | Error |
| 33 | GND (Signal Ground) |
| 34 | Non conectado |
| 35 | Non conectado |
| 36 | Non conectado |

-- [Volver](#)