

Función dos 36 pines do porto Centronics

A función de cada un dos 36 pines do porto Centronics é a seguinte:

Pin	Señal
1	Strobe
2	Data0
3	Data1
4	Data2
5	Data3
6	Data4
7	Data5
8	Data6
9	Data7
10	Ack
11	Busy
12	Paper Empty
13	Select
14	Auto Feed
15	{OSCXT} (Error)
16	GND (Signal Ground)
17	GND (Chassis Signal Ground)
18	5V
19	GND (Signal Ground)
20	GND (Signal Ground)
21	GND (Signal Ground)
22	GND (Signal Ground)
23	GND (Signal Ground)
24	GND (Signal Ground)
25	GND (Signal Ground)
26	GND (Signal Ground)
27	GND (Signal Ground)
28	GND (Signal Ground)
29	GND (Signal Ground)
30	GND (Signal Ground)

Pin	Señal
31	Prime
32	Error
33	GND (Signal Ground)
34	Non conectado
35	Non conectado
36	Non conectado

-- [Volver](#)